



Receiver Programming

These instructions are for programming Receivers to a new Transmitter. Please be sure to read the entire instructions before programming.

NOTE: You will need the part number on the Remote Shut-off receiver label to continue.

Contents

Receivers with an "X" in the part number	2
Receivers with a "C" in the part number	4
Receivers with an "U" in the part number	5

(for example: RES12VX, RES6VX)

OPENING THE NEW TRANSMITTER

- 1) Your new transmitter should look like this: (front)




(back)




- 2) Flip the transmitter over and remove the ring clip.



- 3) Remove the Philips head screw and gently pry the plastic case open.

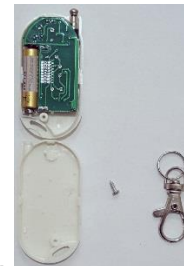


- 4) Remove the circuit board but leave the battery in place.

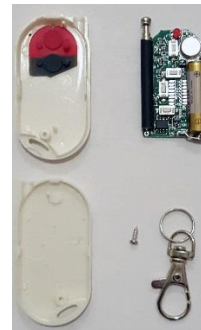


PROGRAMMING

- 1) Disconnect power to the Receiver.
- 2) Have the new Transmitter (with battery) ready. (test by pushing a button and the red LED should turn on.)
- 3) Apply power to the Receiver and continue to the next step within **10 seconds**.

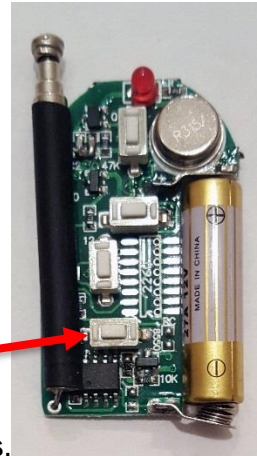


- 4) Push the bottom button on the receiver for **3 seconds**.
- 5) Listen for a long beep from the receiver indicating that the transmitter's code has been saved.
- 6) Disconnect the power to the Receiver for a few seconds.
- 7) Connect power to the Receiver and test new Transmitter by pushing the Lock and then

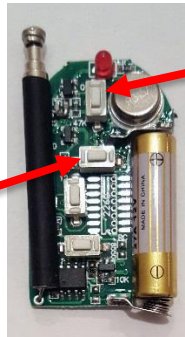

the Unlock buttons.

ERASE RECEIVER

- 1) The Receiver's memory can be entirely erased of all transmitter codes.
- 2) Disconnect power to the Receiver for a few seconds and reconnect.

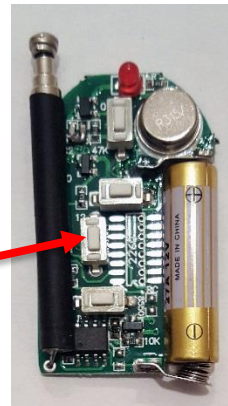

- 3) Press the Erase button on the transmitter for 5 seconds.
- 4) Release the button when you hear 8 short beeps from the Receiver indicating that all codes have been erased.

Programming requires the use of a Programming Transmitter that is available on our website.

PROGRAMMING

- 1) Disconnect power from the Receiver for 30 seconds.
- 2) Have the new Transmitter and the Programming Transmitter ready. They will both be used within a few seconds once power is applied to the Receiver.
- 3) Apply power to the Receiver (should be two beeps {programmed} or three beeps {erased}) and continue to next step within **5 seconds**.
- 4) Press the white LOCK button on the Programming Transmitter. The receiver will emit two beeps to signal that it is ready to be programmed. Continue to the next step within **5 seconds**.



- 5) Press the “Lock” button on the new Transmitter. The receiver will emit one beep.
- 6) Press the “Unlock” button on the new Transmitter. The receiver will emit three beeps.
- 7) Optional - If more than one transmitter is being programmed to the receiver, repeat Step 5 and 6 until all transmitters have been programmed (Limit of 20)
- 8) Disconnect the power to the Receiver for a few seconds.
- 9) Connect power to the Receiver and test new Transmitter function.

ERASE RECEIVER

- 1) The Receiver’s memory can be entirely erased by disconnecting power (30 seconds) and reconnecting power to the Receiver.
 - 2) Immediately after power is connected, press the white UNLOCK button on the Programming Transmitter until the receiver emits six short beeps to confirm complete deletion of all transmitter programming.
-



Receivers with a “U” in the part number

(for example: RES12VU, RES6VU-B, RES12VUE)

PROGRAMMING

- 1) Disconnect power from the Receiver for 30 seconds.
- 2) Have the new Transmitter (white) and the Programming Transmitter (black) ready. They will both be used within a few seconds once power is applied to the Receiver.
- 3) Apply power to the Receiver (1 beep) and continue to next step within **5 seconds**.
- 4) Press and hold the LOCK button on the Programming Transmitter. Within a few seconds the Receiver will emit one beep. Let go of the LOCK button and continue to the next step within **5 seconds**.
- 5) Press the “Lock” button on the new Transmitter. The receiver will emit three beeps to confirm programming.
- 6) Repeat step 5 if more than one Transmitter is being programmed.
- 7) Disconnect the power to the Receiver for a few seconds.
- 8) Connect power to the Receiver and test new Transmitter function.

ERASE RECEIVER

- 3) The Receiver’s memory can be entirely erased by disconnecting power (30 seconds) and reconnecting power to the Receiver.
 - 4) Immediately after power is connected, press and hold the UNLOCK button on the Programming Transmitter until the receiver emit five beeps to confirm complete deletion of all transmitter programming.
-